

Einstellen der Federkraft Kinvaro T-105
Adjustment of spring tension Kinvaro T-105
Réglage de la force du ressort Kinvaro T-105

GB



Mounting Instructions:

The adjustable spring is in mid-position upon delivery. After the fitting has been mounted, the spring tension can be set by use of a screwdriver (Pozi-drive Size 2) or powered screwdriver. Please ensure that the lowest torque moment is engaged when using the powered screwdriver. The adjustment screw for the spring tension can be easily accessed through the opening in the housing of the fitting. Turning to the right increases the spring tension, whereas turning to the left decreases it. Maximum spring tension is signaled by a clicking sound.

The spring adjustment must be optimized to the extent necessary to make the flap remain open securely at approx. 90°.

Demounting Instructions:

To demount the flap, carefully pull the upper part of the fitting away sideways.
 Do not bang against the flap stay!