

Code EDS45XS – 45cm Freestanding Dishwasher



10 PLACE SETTINGS

The 10-place settings option this dishwasher provides results in greater flexibility in what types of dishes and cutlery that can be washed.

SIMPLE ELECTRONIC PROGRAM SELECTOR

This euro dishwasher operates via electronic push button control for you to easily select your preferred program.

SLIDE OUT CUTLERY RACK

This slide out rack provides an easy and organised way to load your cutlery.

FEATURES

- Stainless steel finish
- 10 place setting
- 7 wash programs
 - + Rapid
 - + Soak
 - + Eco
 - + 90 minute
 - + Glass
 - + Heavy
 - + Intensive
- 2 Level height adjustable upper basket
- Slide out cutlery rack
- Alternative wash function
- Delay start option (1 - 24 hours)
- Extra dry and strong wash functions
- Child lock safety
- Concealed Heating Element
- Removable top cover (30mm)
- Water consumption 11.0 L
- 3.5 star energy rating
- 3.5 star water rating

7 WASH PROGRAMS WITH 90 MINUTE WASH

This dishwasher provides you with the choice of 7 different wash programs to ensure you can select the type of wash which best suits whether it be after a small meal or large dinner party.

2 LEVEL HEIGHT ADJUSTMENT TOP BASKET

The adjustable top basket has the option of a high or low setting, Ensuring you can fit in those taller than normal dishes with ease.

WATER CONSUMPTION:

11.0 liters per wash (using normal program)
(3.5 star water rating)

ENERGY USAGE:

189 kWh per year
(Cold water connection, using Eco program seven times per week)
(3.5 star energy rating)

NOISE LEVEL: 49 Db

INLET HOSE / DRAIN HOSE LENGTH: 1.8m / 1.6m

WEIGHT:

45.5kg (gross) - 40.0kg (net)

FILTER CLEANING INFORMATION:

Drain pump filter: requires cleaning monthly.
This will ensure no interruptions with the dishwasher operation.

PRODUCT DIMENSIONS

448mm width x 845mm height x 600mm depth
(Adjustable feet 15mm)

INSTALLATION: Please refer qualified installer to our product instruction manual.

