


**INNER DRAWER APPLICATION
(SIDE VIEW)**

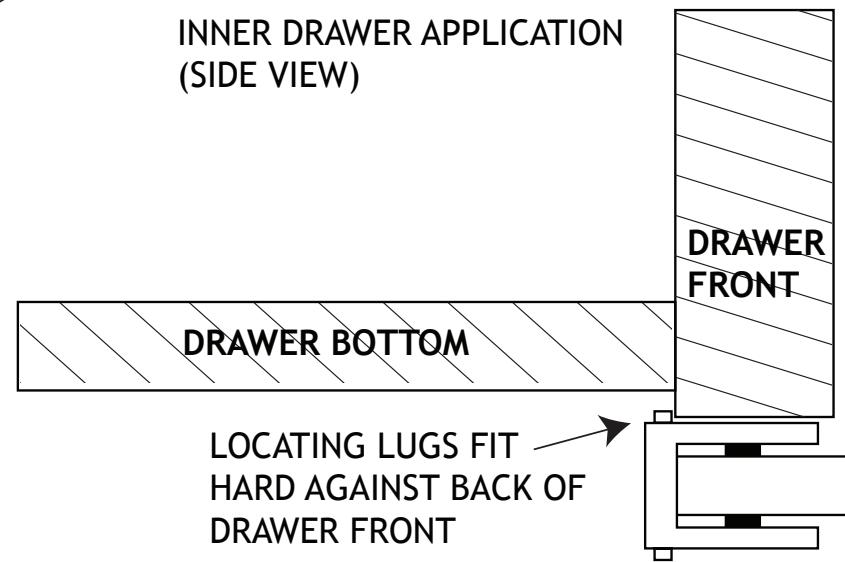


**NAME:
Slide door protector - fitting instructions**

DESCRIPTION:

Set drawer or shelf minimum 8mm back from the front edge of the cabinet.
Spacer, supplied with the protector, is not used in this application.

PAGE:
1 of 7

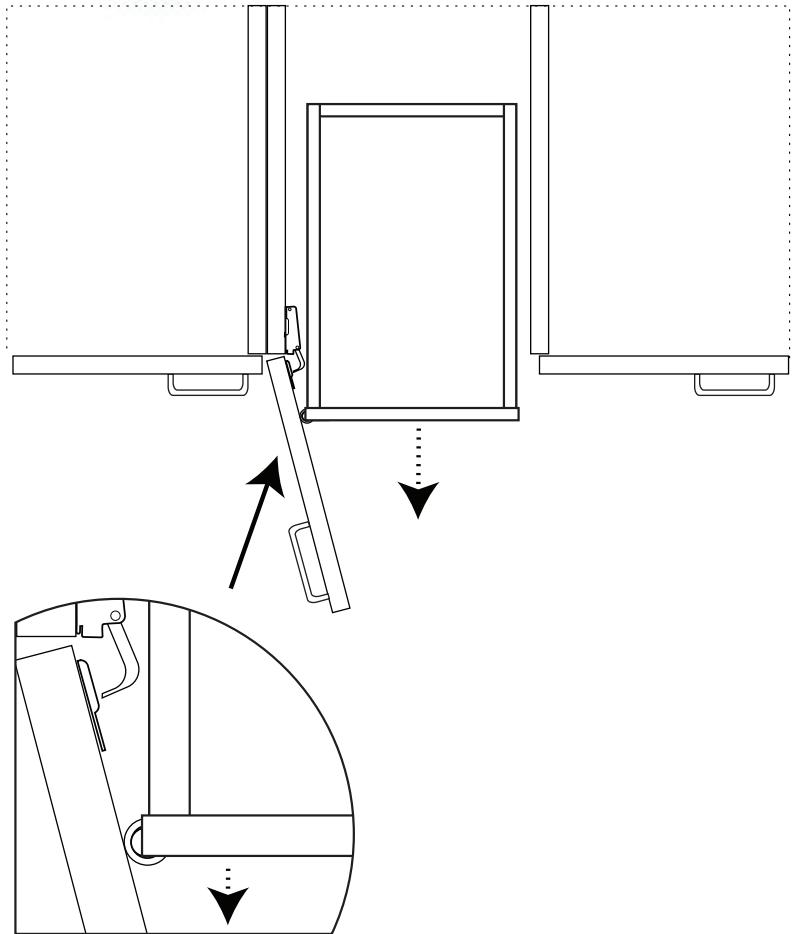

NAME:


Slide door protector - fitting instructions


DESCRIPTION:

Set drawer or shelf minimum 8mm back from the front edge of the cabinet.
Spacer, supplied with the protector, is not used in this application.

PAGE:
2 of 7

© CORNA HARDWARE

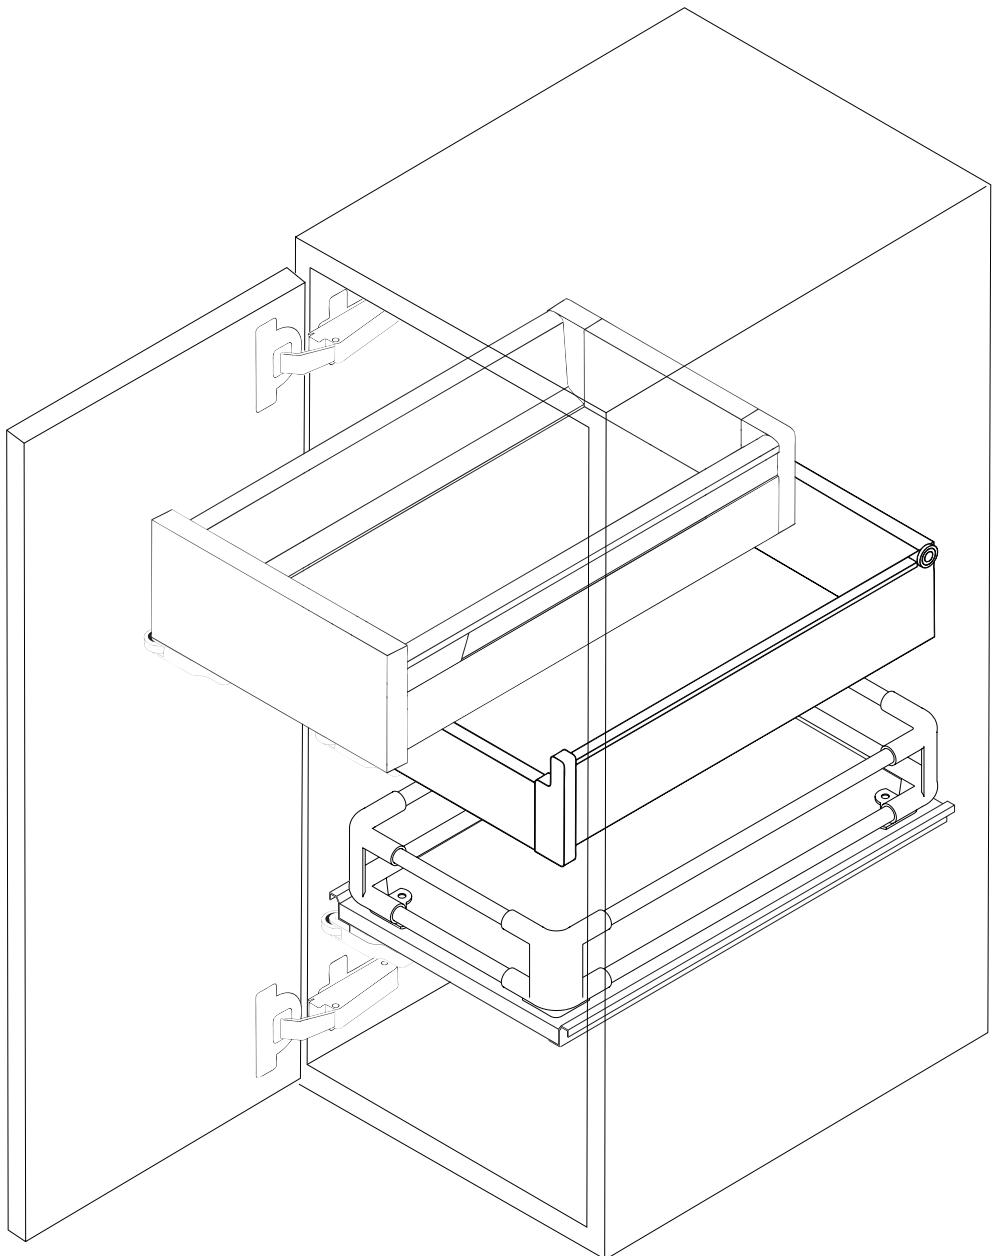

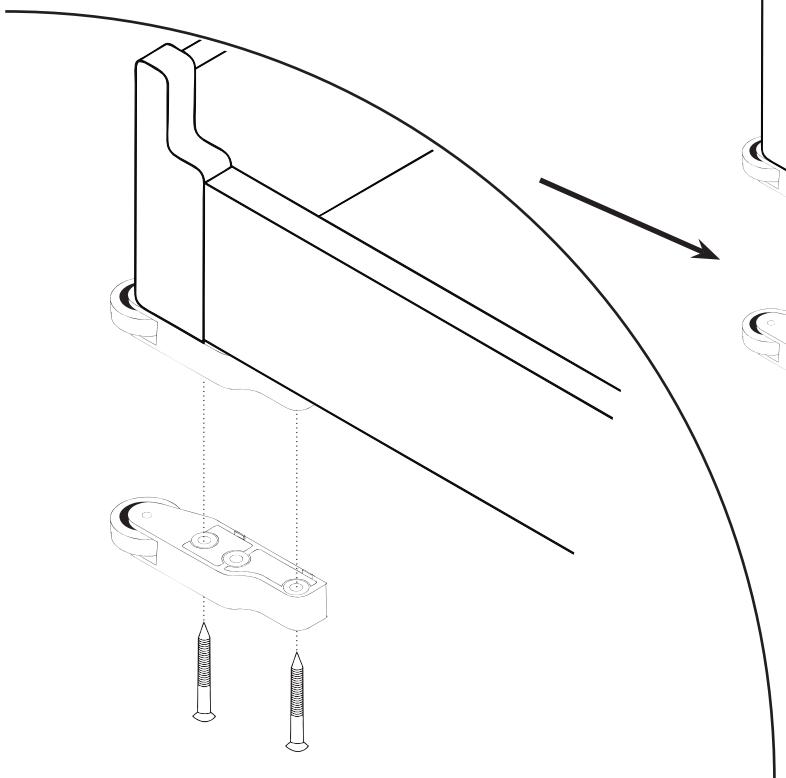

NAME:


Slide door protector - fitting instructions

DESCRIPTION:


Set drawer or shelf minimum 8mm back from the front edge of the cabinet.
Spacer, supplied with the protector, is not used in this application.


PAGE:
3 of 7

© CORNA HARDWARE

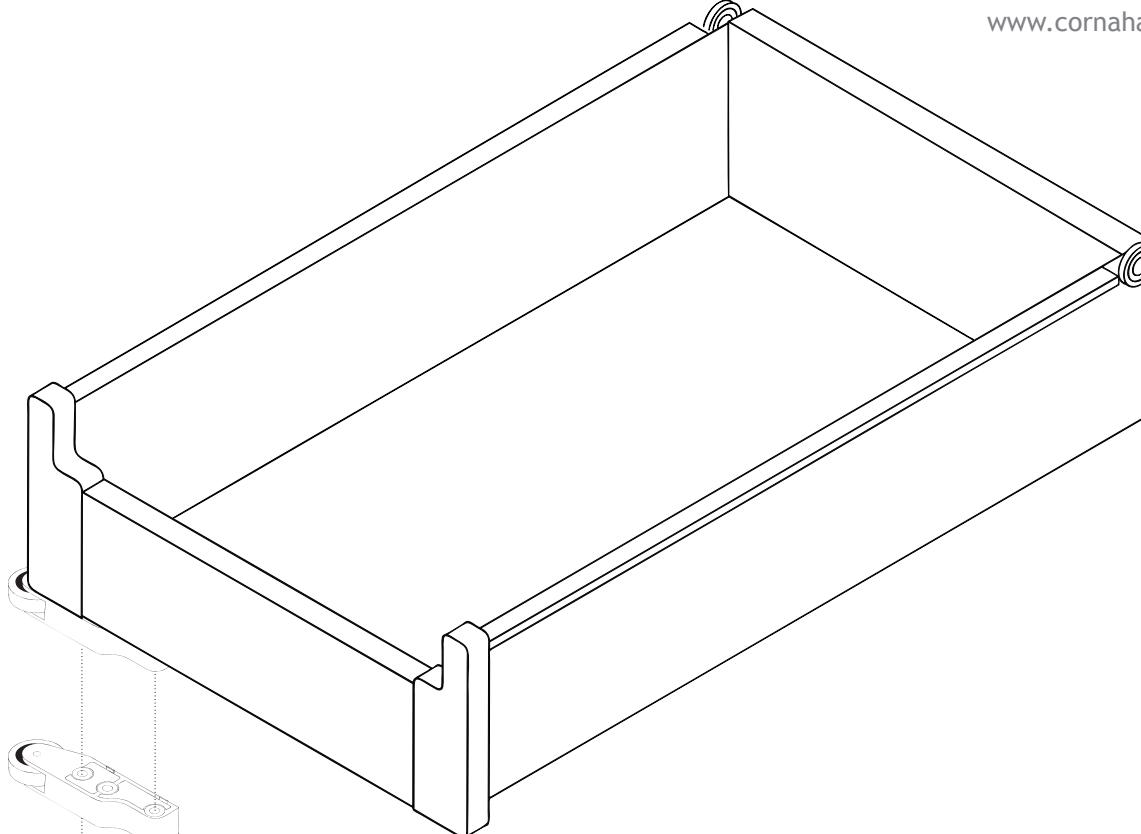

**INNER DRAWER APPLICATION
(SIDE VIEW)**

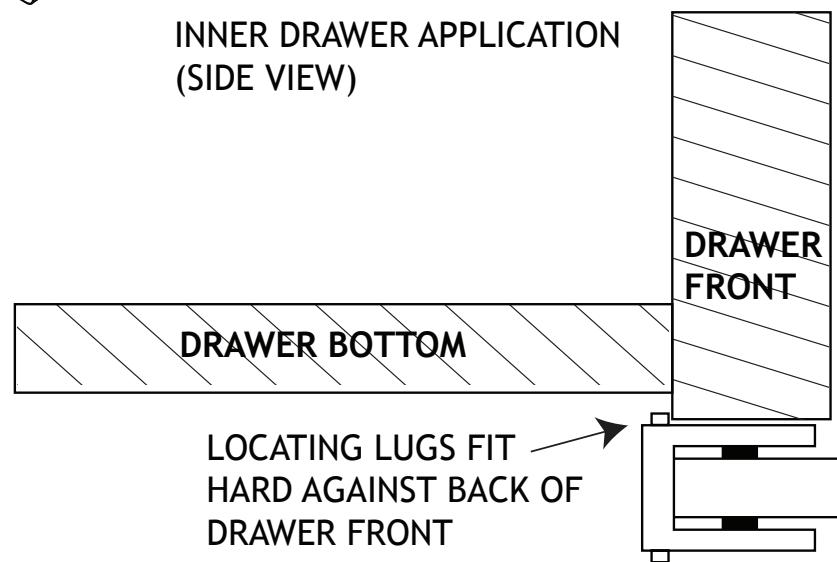

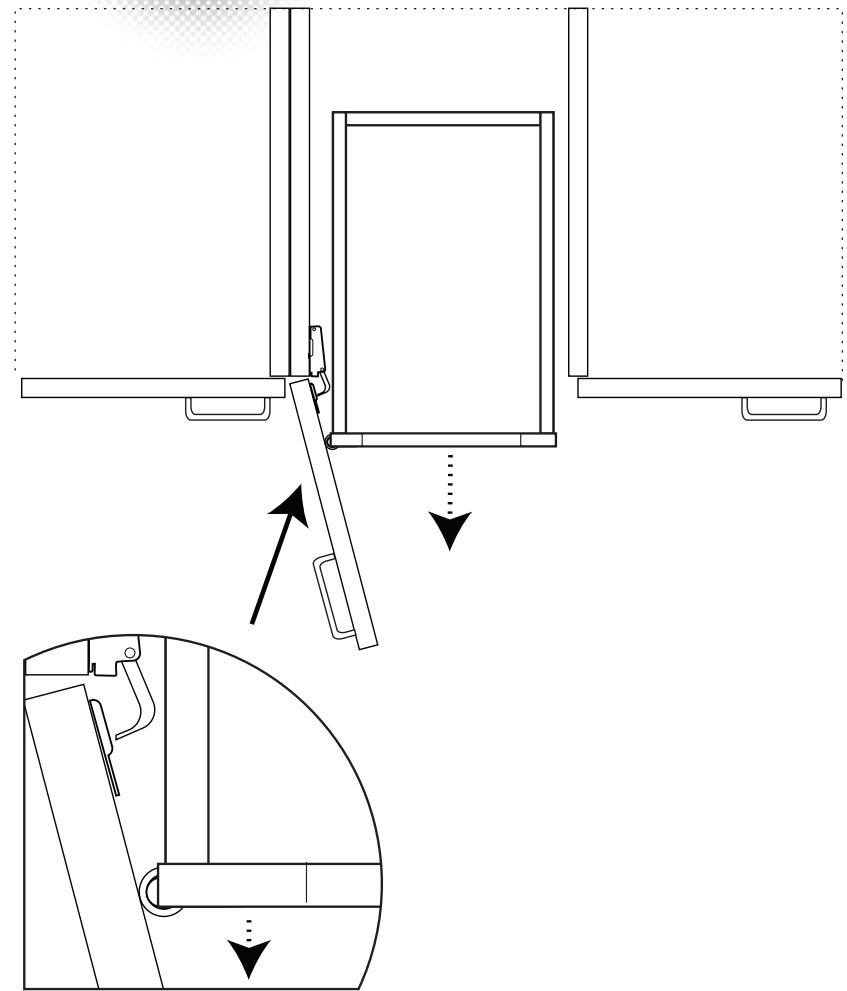

NAME:

Slide door protector - fitting instructions


PAGE:



4 of 7

© CORNA HARDWARE

DESCRIPTION:



Set drawer or shelf minimum 8mm back from the front edge of the cabinet.
Spacer, supplied with the protector, is not used in this application.

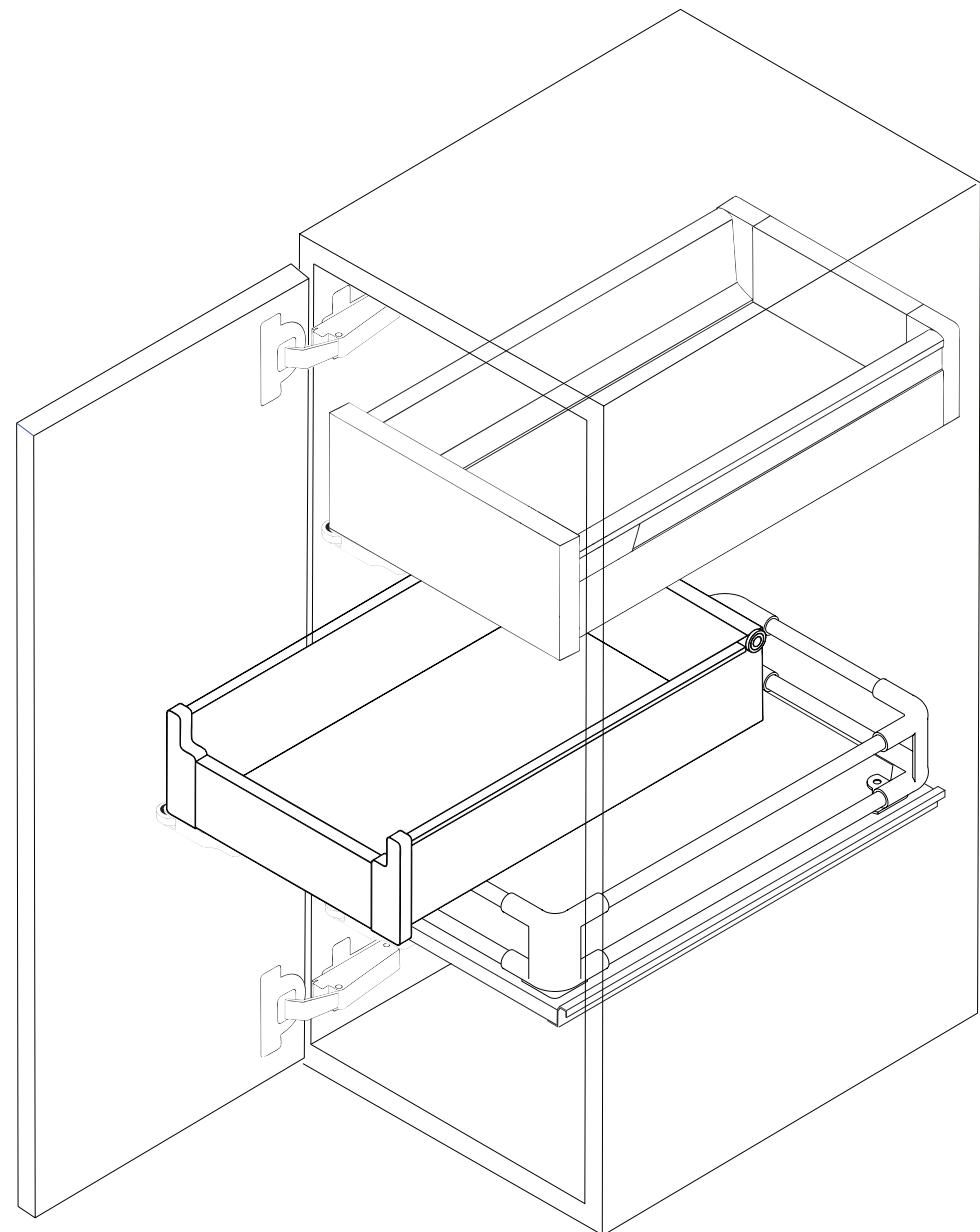

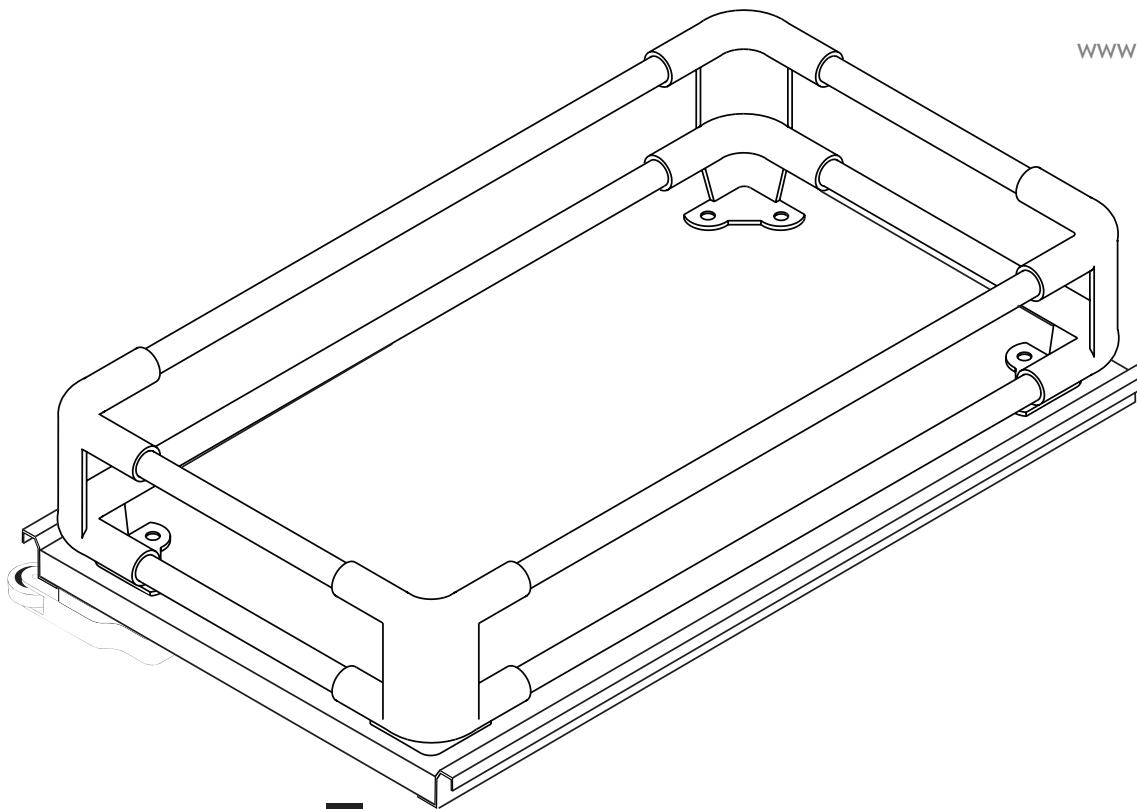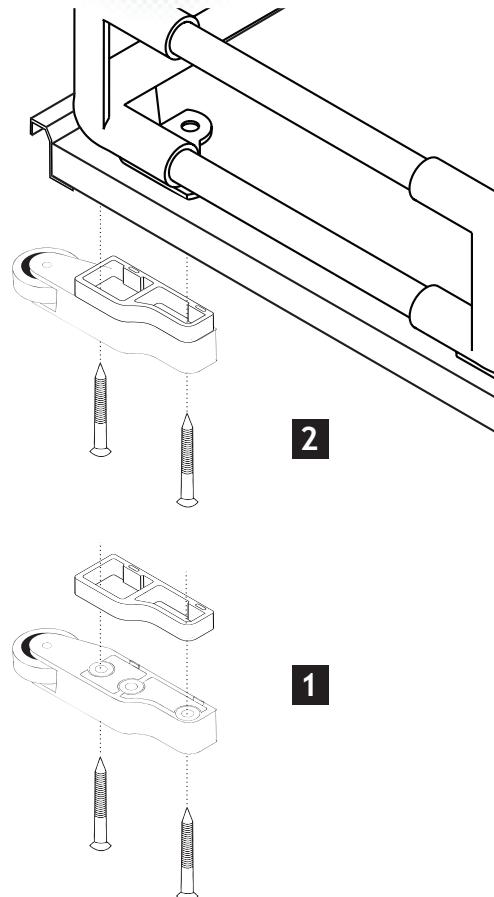

3

INNER DRAWER APPLICATION
(FRONT VIEW)

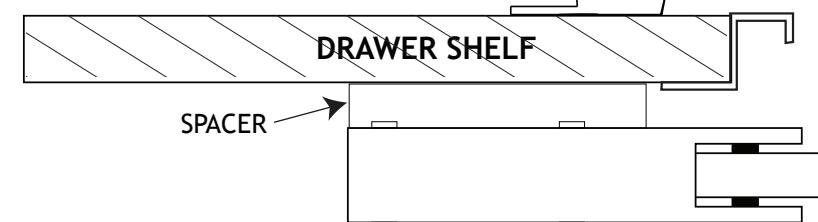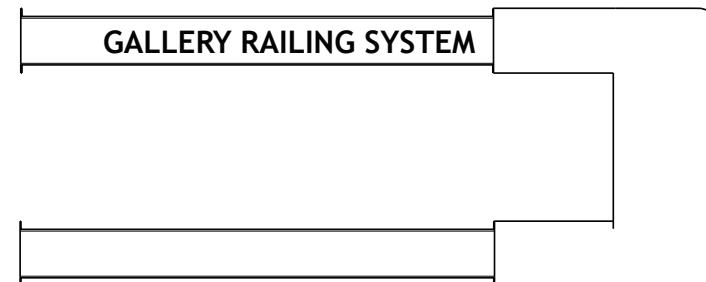


NAME:

Slide door protector - fitting instructions

DESCRIPTION:

Set drawer or shelf minimum 8mm back from the front edge of the cabinet.
Use spacer to clear runner with shelf mounting application.

PAGE:
5 of 7

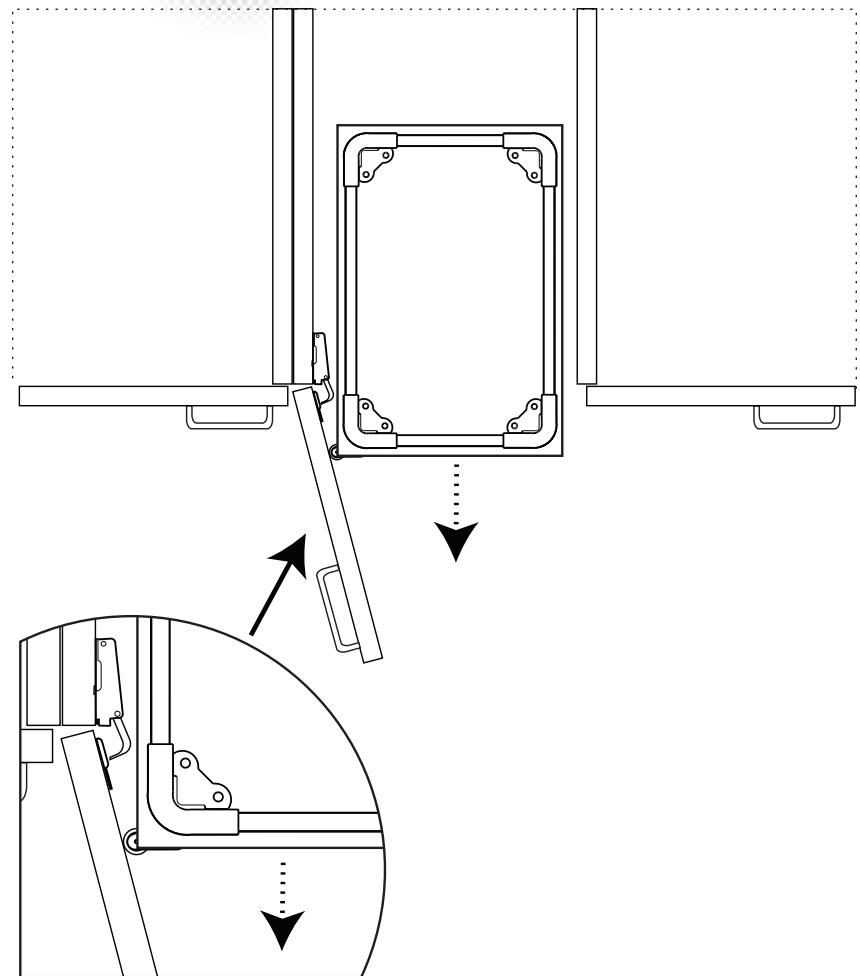

NAME:


Slide door protector - fitting instructions


DESCRIPTION:

Set drawer or shelf minimum 8mm back from the front edge of the cabinet.
Use spacer to clear runner with shelf mounting application.

PAGE:
6 of 7

© CORNA HARDWARE

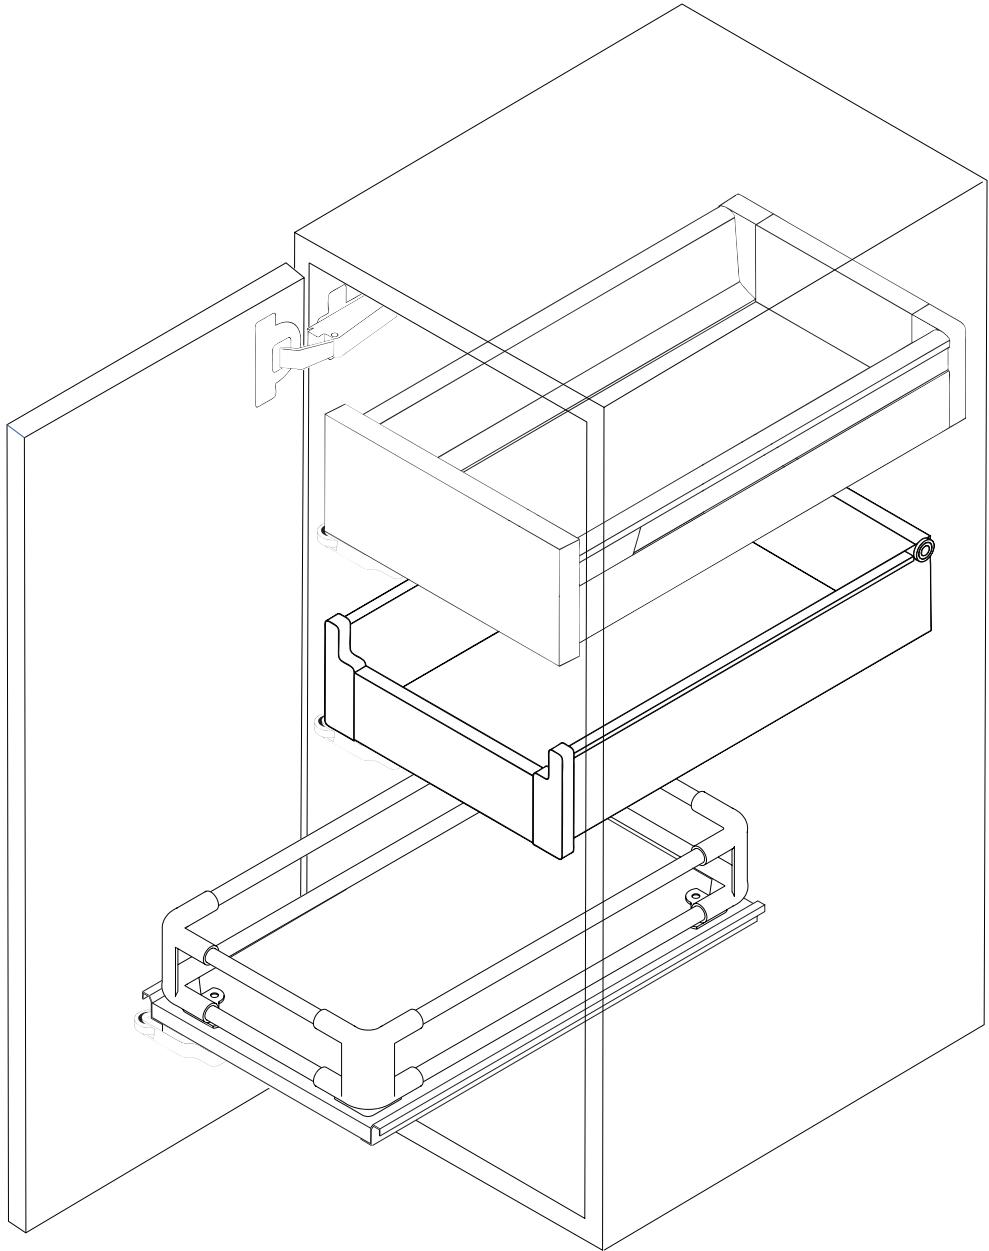

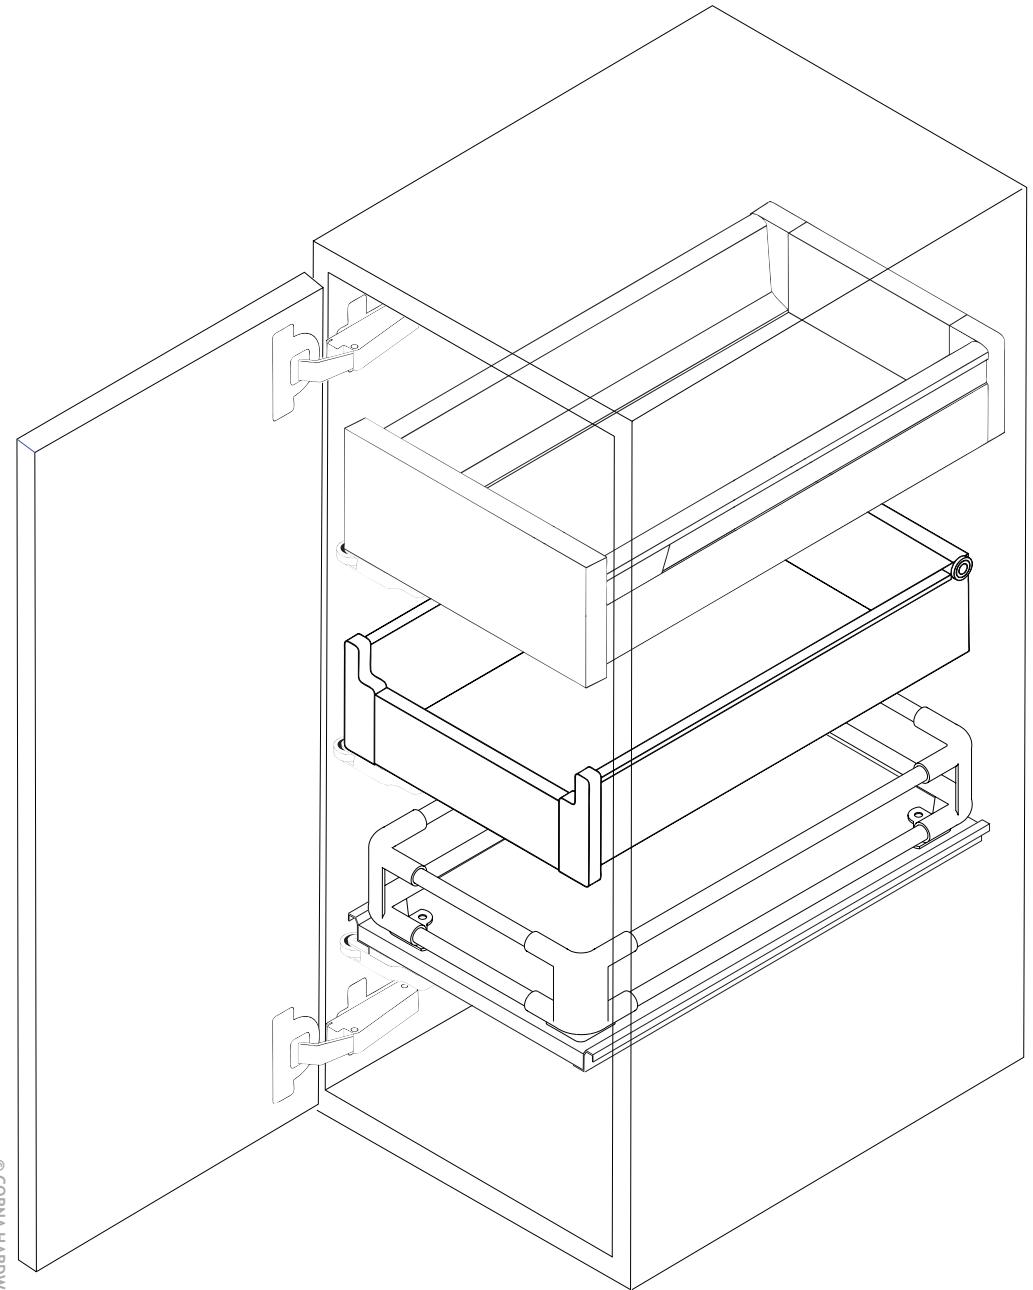

NAME:

Slide door protector - fitting instructions

DESCRIPTION:

And it's done!

PAGE:

7 of 7

© CORNA HARDWARE