

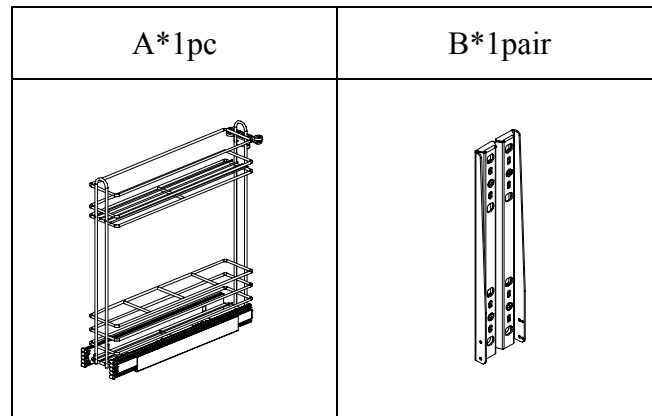


INSTALLATION INSTRUCTIONS


For B07315 or B27315

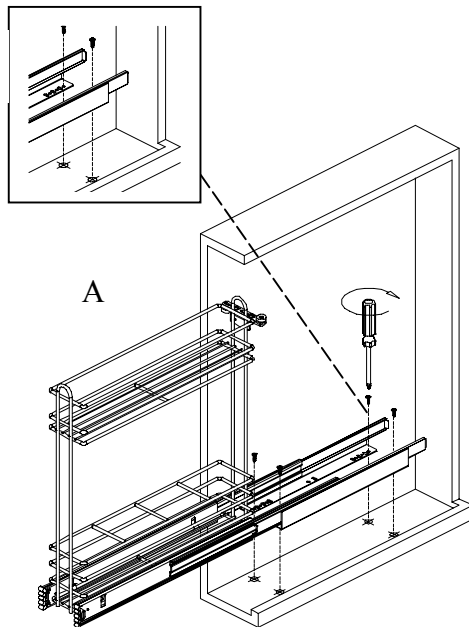

Step 1:
(Bottom of Cabinet)

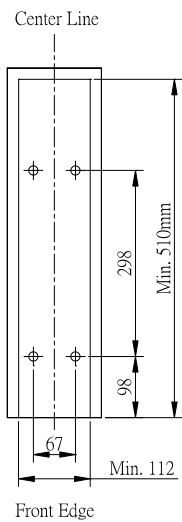


Step 2: (Door Panel)

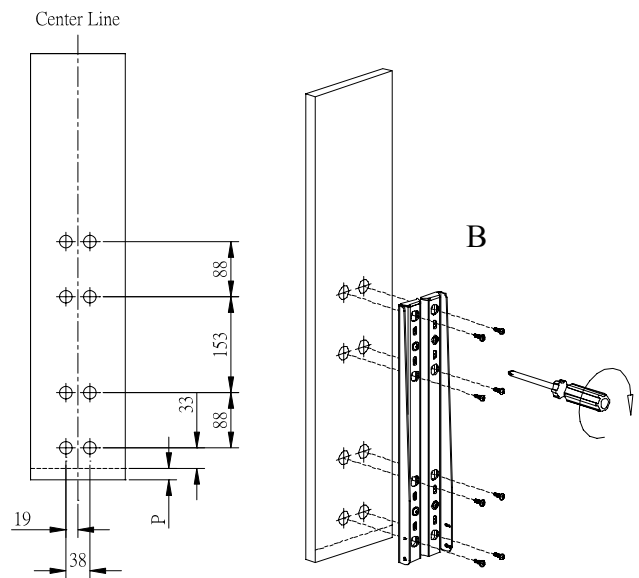

P=The thickness of cabinet panel.

Step 3:

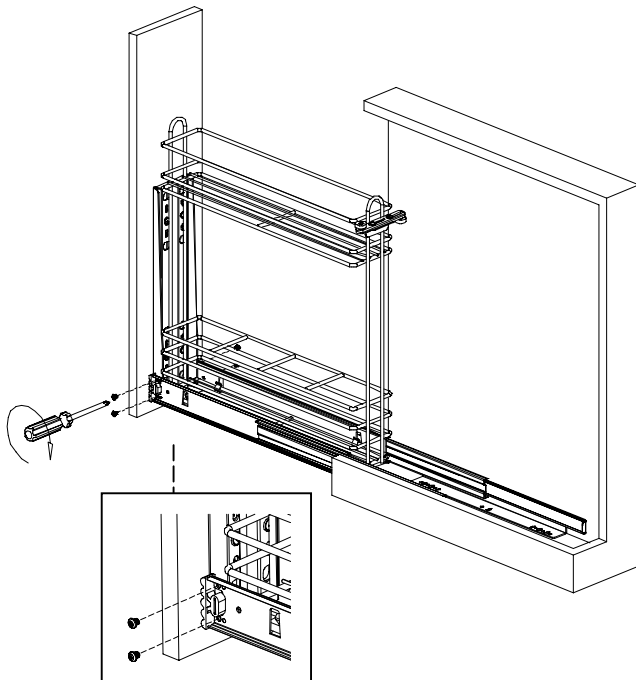

Finished

